

Compatibility with Android

8/6/2026

【Note】

- USB/Bluetooth connection failure may occur on some Android devices that support the OS requirements, since the Android manufactures customize their own devices.
- *USB-MIDI compatible system is required when connecting with USB-MIDI.
- *USB Audio Device Class (Asynchronous) compatible system is required when connecting with USB-Audio.
- *Advanced Audio Distribution Profile (A2DP) compatible system is required when connecting with Bluetooth Audio.
- *Bluetooth MIDI (MIDI over Bluetooth low energy) compatible system is required with Bluetooth MIDI.

- USB-OTG cable is required when connecting with USB.
- Please note that we have discontinued our support for any products not listed in these charts.
- We have tested new products with the latest versions as of August 2026.

Product Name	OS	Android 15 support	Android 16 support	Android 17 support	Remarks
Software					
Tone Room		Yes*1	Yes*1	Yes*1	*1: Please update to the latest version and use.
Amp/Effector					
VX II					
- Main Unit (USB-Audio)		No*1	No*1	No*1	*1: Sometimes noise is mixed in during recording/playback.
- Main Unit (USB-MIDI)		Yes*1	Yes*1	Yes*1	*1: USB-MIDI may not be released and cannot be used while or after an app that occupies the USB audio device is running. In this case, restarting your Android device will make USB-MIDI available again.
VT20X/VT40X/VT100X					
- Main Unit (USB-MIDI)		Yes*1	Yes*1	Yes*1	*1: USB-MIDI may not be released and cannot be used while or after an app that occupies the USB audio device is running. In this case, restarting your Android device will make USB-MIDI available again.
VX50 GTV					
- Main Unit (USB-Audio)		No*1	No*1	No*1	*1: Sometimes noise is mixed in during recording/playback.
- Main Unit (USB-MIDI)		Yes*1	Yes*1	Yes*1	*1: USB-MIDI may not be released and cannot be used while or after an app that occupies the USB audio device is running. In this case, restarting your Android device will make USB-MIDI available again.
Adio GT/BS					
- Main Unit (USB-Audio)		No*1	No*1	No*1	*1: Sometimes noise is mixed in during recording/playback.
- Main Unit (USB-MIDI)		Yes*1	Yes*1	Yes*1	*1: USB-MIDI may not be released and cannot be used while or after an app that occupies the USB audio device is running. In this case, restarting your Android device will make USB-MIDI available again.
Adio Air GT/BS					
- Main Unit (USB-Audio)		No*1	No*1	No*1	*1: Sometimes noise is mixed in during recording/playback.
- Main Unit (USB-MIDI)		Yes*1	Yes*1	Yes*1	*1: USB-MIDI may not be released and cannot be used while or after an app that occupies the USB audio device is running. In this case, restarting your Android device will make USB-MIDI available again.
- Main Unit (Bluetooth Audio)		Yes	Yes	Yes	
- Main Unit (Bluetooth MIDI)		Yes	Yes	Yes	
VOX Cambridge50					
- Main Unit (USB-Audio)		No*1	No*1	No*1	*1: Sometimes noise is mixed in during recording/playback.
- Main Unit (USB-MIDI)		Yes*1	Yes*1	Yes*1	*1: USB-MIDI may not be released and cannot be used while or after an app that occupies the USB audio device is running. In this case, restarting your Android device will make USB-MIDI available again.
VOX MINI SUPERBEETLE AUDIO					
- Main Unit (Bluetooth Audio)		Yes	Yes	Yes	
VOX Micro Superbeetle Guitar/Audio					
- Main Unit (Bluetooth Audio)		Yes	Yes	Yes	