



# Continental KEYBOARD

## Voice Name List

### Table of Contents

<b>VARIATION.....</b>	<b>2</b>
<b>ORGAN .....</b>	<b>2</b>
CX-3.....	2
VOX.....	2
COMPACT.....	2
<b>E.PIANO .....</b>	<b>2</b>
TINE .....	2
REED.....	2
FM .....	2
<b>PIANO .....</b>	<b>2</b>
GRAND .....	2
UPRIGHT .....	2
E. GRAND.....	2
<b>KEY/LAYER .....</b>	<b>3</b>
KEY.....	3
BRASS .....	3
STRINGS.....	3
LEAD.....	3
SYNTH.....	3
OTHER.....	3
<b>SCENE .....</b>	<b>4</b>
<b>EFFECTS controls.....</b>	<b>4</b>
EFFECT.....	4
DELAY .....	4
REVERB .....	4
<b>Demo songs.....</b>	<b>4</b>

# VARIATION

## ORGAN

### CX-3

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	8/8/8 Drawbars C3	Rotary Slow/Fast	--	--
02	8/8/8/8 Drawbars	Rotary Slow/Fast	--	--
03	Rock Organ 1	Rotary Slow/Fast	--	--
04	Rock Organ 2	Rotary Slow/Fast	--	--
05	Rock Organ 3	Rotary Slow/Fast	--	--
06	Rock Organ 4	Rotary Slow/Fast	--	--
07	Full Organ 1	Rotary Slow/Fast	--	--
08	Full Organ 2	Rotary Slow/Fast	--	--
09	Distortion Organ	Rotary Slow/Fast	--	--
10	R&B Organ 1	Rotary Slow/Fast	--	--
11	R&B Organ 2	Rotary Slow/Fast	--	--
12	Jazz Organ 1	Rotary Slow/Fast	--	--
13	Jazz Organ 2	Rotary Slow/Fast	--	--
14	Jazz Organ 3	Rotary Slow/Fast	--	--
15	Jazz Organ 4	Rotary Slow/Fast	--	--
16	Gospel Organ	Rotary Slow/Fast	--	--
17	Blues Organ	Rotary Slow/Fast	--	--
18	Funk Organ	Rotary Slow/Fast	--	--
19	Quiet Hymn	Rotary Slow/Fast	--	--

### VOX

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	VOX Organ Basic	Rotary Slow/Fast	--	--
02	VOX Organ Full	Rotary Slow/Fast	--	--
03	VOX Organ Vibrato	Rotary Slow/Fast	--	--
04	A Message to You Organ	Rotary Slow/Fast	--	--
05	Mess Around Organ	Rotary Slow/Fast	--	--
06	I'm Down Organ	Rotary Slow/Fast	--	--
07	Light My Fire Organ	Rotary Slow/Fast	--	--
08	Soul Kitchen Organ	Rotary Slow/Fast	--	--
09	Pump It Up Organ	Rotary Slow/Fast	--	--
10	Radio Radio Organ 1	Rotary Slow/Fast	--	--
11	Radio Radio Organ 2	Rotary Slow/Fast	--	--

### COMPACT

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Compact Organ Basic	Rotary Slow/Fast	--	--
02	Compact Organ Full	Rotary Slow/Fast	--	--
03	Compact Organ Vibrato	Rotary Slow/Fast	--	--
04	Arnold Layne Organ	Rotary Slow/Fast	--	--
05	Wooly Bully Organ	Rotary Slow/Fast	--	--
06	Mission Impossible Organ	Rotary Slow/Fast	--	--
07	Incense and Pepp Organ	Rotary Slow/Fast	--	--
08	Rock Lobster Organ	Rotary Slow/Fast	--	--
09	Jerk It Out Organ	Rotary Slow/Fast	--	--
10	X Offender Organ	Rotary Slow/Fast	--	--
11	11:59 Organ	Rotary Slow/Fast	--	--

## E.PIANO

### TINE

No.	Name	Bend lever	ASSIGN1	ASSIGN2
1	E.Piano MK I	Tremolo ON/OFF	--	--
2	E.Piano MK I Amp	Tremolo ON/OFF	--	--
3	E.Piano MK I Tremolo	Tremolo ON/OFF	--	--
4	E.Piano MK I Bell Tremolo	Tremolo ON/OFF	--	--
5	E.Piano MK I Phaser	Tremolo ON/OFF	--	--
6	E.Piano MK II Amp	Tremolo ON/OFF	--	--
7	E.Piano MK II Tremolo	Tremolo ON/OFF	--	--
8	E.Piano MK V	Tremolo ON/OFF	--	--
9	E.Piano Dyno Chorus	Tremolo ON/OFF	--	--

### REED

No.	Name	Bend lever	ASSIGN1	ASSIGN2
1	Reed EP 200	Tremolo ON/OFF	--	--
2	Reed EP 200 Tremolo	Tremolo ON/OFF	--	--
3	Reed EP 200 Amp	Tremolo ON/OFF	--	--
4	Reed EP 200A Tremolo	Tremolo ON/OFF	--	--
5	Reed EP 200A Chorus	Tremolo ON/OFF	--	--
6	Reed EP 200A Drive	Tremolo ON/OFF	--	--

### FM

No.	Name	Bend lever	ASSIGN1	ASSIGN2
1	FM E.Piano 1	Tremolo ON/OFF	--	--
2	FM E.Piano 2	Tremolo ON/OFF	--	--
3	Dark FM E.Piano	Tremolo ON/OFF	--	--
4	FM E.Piano Bell	Tremolo ON/OFF	--	--
5	E.Piano Pad	Tremolo ON/OFF	--	--
6	Piano Pad	Tremolo ON/OFF	--	--
7	Wired Piano	Tremolo ON/OFF	--	--

## PIANO

### GRAND

No.	Name	Bend lever	ASSIGN1	ASSIGN2
1	Grand Piano 1	--	--	--
2	Grand Piano 2	--	--	--
3	Dark Grand Piano	--	--	--
4	Bright Grand Piano	--	--	--
5	Grand Piano Mono	--	--	--
6	Rock Octave Piano	--	--	--

### UPRIGHT

No.	Name	Bend lever	ASSIGN1	ASSIGN2
1	Upright Piano 1	--	--	--
2	Upright Piano 2	--	--	--
3	Upright Piano Mono 1	--	--	--
4	Upright Piano Mono 2	--	--	--
5	Old Upright Piano	--	--	--
6	Honky Tonk	--	--	--
7	Cold Upright Piano	--	--	--

### E. GRAND

No.	Name	Bend lever	ASSIGN1	ASSIGN2
1	E.Grand Piano 1	--	--	--
2	E.Grand Piano 2	--	--	--
3	M1 Piano	--	--	--
4	Piano + Dyno	--	--	--
5	Romance Piano	--	--	--

# KEY/LAYER

## KEY

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Clav AD	Pitch Bend	Mute (Decay)	Effect Depth
02	Clav AC	Pitch Bend	Mute (Decay)	Effect Depth
03	Clav BD	Pitch Bend	Mute (Decay)	Effect Depth
04	Clav BC	Pitch Bend	Mute (Decay)	Effect Depth
05	Clav Wah	Pitch Bend	Mute (Decay)	EffectDepth /Sound Character
06	Harpsichord Single	Pitch Bend	Key Off Level	Mute
07	Harpsichord Double	Pitch Bend	Key Off Level	Mute
08	Pipe Organ Positiv	Pitch Bend	Stop Variation	Effect Depth
09	Pipe Organ Mixtur	Pitch Bend	Stop Variation	Effect Depth
10	Pipe Organ Plenum	Pitch Bend	Stop Variation	Effect Depth
11	Pipe Organ Tutti	Pitch Bend	Stop Variation	Effect Depth
12	Accordion	Pitch Bend	Stop Variation 1	Stop Variation 2
13	Musette	Pitch Bend	Stop Variation 1	Stop Variation 2

## BRASS

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Bright Brass	Pitch Bend	Sound Character	Effect Depth
02	Trumpets Velo Shake	Pitch Bend	Sound Character	Effect Depth
03	Sfz Brass	Pitch Bend	Sound Character	Effect Depth
04	Funk Brass	Pitch Bend	Sound Character	Effect Depth
05	Brass Section	Pitch Bend	Sound Character	Effect Depth
06	Dynamic Brass	Pitch Bend	Sound Character	Effect Depth
07	Warm Brass	Pitch Bend	Sound Character	Effect Depth
08	Hard Attack Flute Vibrato	Pitch Bend	Staccato	Effect Depth
09	Tape Flutes	Pitch Bend	Tape Simulation	Sound Character

## STRINGS

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Analog Strings	Pitch Bend	Sound Character 1	Sound Character 2
02	String Pad	Pitch Bend	Sound Character 1	Sound Character 2 (Effect Depth)
03	Legato Strings	Pitch Bend	Sound Character 1	Sound Character 2
04	Slow Strings	Pitch Bend	Sound Character 1	Sound Character 2
05	Small Pop Strings	Pitch Bend	Sound Character	Marcato
06	Arco Strings	Pitch Bend	Sound Character 1	Sound Character 2
07	Pizzicato	Pitch Bend	w/ Strings	only Strings
08	Tape Strings	Pitch Bend	Tape Simulation	Sound Character
09	Air Voices	Pitch Bend	Sound Character 1	Sound Character 2
10	Ooh Voices	Pitch Bend	Sound Character 1	Sound Character 2
11	Uhh Voices	Pitch Bend	Sound Character 1	Sound Character 2
12	Classical Choir	Pitch Bend	Sound Character 1	Sound Character 2

## LEAD

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Sine Lead	Pitch Bend	Portamento ON/OFF	Effect Depth
02	Espress Lead	Pitch Bend	Portamento ON/OFF	Sound Character
03	Deep Soul Lead	Pitch Bend	Portamento ON/OFF	Effect Depth
04	Saw Reso Lead	Pitch Bend	Portamento ON/OFF	Sound Character
05	Keen Lead	Pitch Bend	Portamento ON/OFF	Sound Character
06	Analog Lead	Pitch Bend	Sound Character	Effect Depth
07	Detuned Rock Lead	Pitch Bend	Portamento ON/OFF	Sound Character
08	Soft Distortion Lead	Pitch Bend	Portamento ON/OFF	Effect Depth
09	Rock Lead	Pitch Bend	Portamento ON/OFF	Sound Character
10	Sync Lead	Pitch Bend	Portamento ON/OFF	Sound Character
11	Square Lead	Pitch Bend	Portamento ON/OFF	Sound Character
12	Soft Square Lead	Pitch Bend	Portamento ON/OFF	Sound Character
13	Detuned Lead	Pitch Bend	Portamento ON/OFF	Sound Character/ Effect Depth

## SYNTH

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Power Poly Synth 1	Pitch Bend	Portamento ON/OFF	Sound Character
02	Power Poly Synth 2	Pitch Bend	Sound Character 1	Sound Character 2
03	Bright Synth Brass	Pitch Bend	Sound Character 1	Sound Character 2
04	Warm Synth Brass	Pitch Bend	Portamento ON/OFF	Effect Depth
05	Sine Synth	Pitch Bend	Sound Character	Effect Depth
06	80's Octave Synth	Pitch Bend	Portamento ON/OFF	Sound Character
07	Detuned Stab	Pitch Bend	Sound Character 1	Sound Character 2/ Effect Depth
08	Square Pad	Pitch Bend	Sound Character 1	Sound Character 2
09	The Dawn Pad	Pitch Bend	Sound Character 1	Sound Character 2
10	Glitter String Pad	Pitch Bend	Portamento ON/OFF	Sound Character
11	Bright Sweep Pad	Pitch Bend	Sound Character 1	Sound Character 2

## OTHER

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Marimba	Pitch Bend	Sound Character	Mute
02	Vibraphone	Pitch Bend	Tremolo Fast	Tremolo Slow
03	Glockenspiel	Pitch Bend	Sound Character 1	Sound Character 2
04	FM Tubular Bells	Pitch Bend	Sound Character	Effect Depth
05	Ensemble Bells	Pitch Bend	Sound Character	Effect Depth
06	FM Bells	Pitch Bend	Sound Character	Effect Depth
07	Bleep Bells	Pitch Bend	Sound Character	Effect Depth
08	Nylon Guitar	Pitch Bend	Mute	Effect Depth
09	Distortion Guitar	Pitch Bend	Tremolo	Effect Depth
10	Short Square Lead	Pitch Bend	Sound Character	Effect Depth
11	Impact Orchestra Hit	Pitch Bend	Sound Character	Effect Depth

# SCENE

No.	Button BANK SCENE		Name	Part	Type	Bend lever
00	A	1	VOX Organ Basic	ORGAN	VOX	Rotary Slow/Fast
01	A	2	E.Piano MK II Tremolo	E.PIANO	TINE	Tremolo ON/OFF
02	A	3	Grand Piano 1	PIANO	GRAND	--
03	A	4	Clav AD Wah	KEY/LAYER	KEY	Pitch Bend
04	B	1	Rock Organ 4	ORGAN	CX-3	Rotary Slow/Fast
05	B	2	Reed EP 200 Tremolo	E.PIANO	REED	Tremolo ON/OFF
06	B	3	Upright Piano 1	PIANO	UPRIGHT	--
07	B	4	Detuned Stab	KEY/LAYER	SYNTH	Pitch Bend
08	C	1	Pipe Organ Plenum	KEY/LAYER	KEY	Pitch Bend
09	C	2	FM E.Piano 1	E.PIANO	FM	Tremolo ON/OFF
10	C	3	Piano + Strings	PIANO KEY/LAYER	GRAND STRINGS	--
11	C	4	Sfz Brass	KEY/LAYER	BRASS	Pitch Bend
12	D	1	Arnold Layne Organ	ORGAN	COMPACT	Rotary Slow/Fast
13	D	2	E.Piano MK I Amp Phaser	E.PIANO	TINE	Tremolo ON/OFF
14	D	3	E.Grand Piano 1	PIANO	E. GRAND	--
15	D	4	Deep Soul Lead	KEY/LAYER	LEAD	Pitch Bend

# EFFECTS controls

## EFFECT

No.	Type *1	EFFECT knob	EFFECT button + EFFECT knob
01	CHORUS	Chorus Depth	LFO Frequency
02	PHASER	Phaser Depth	LFO Frequency
03	FLANGER	Flanger Depth	LFO Frequency
04	COMP	Threshold & Gain	Ratio
05	DRIVE	Drive Depth	Mid EQ Fc Gain
06	WAH	Envelope Sensitivity	Frequency

\*1 Press the EFFECT Type button to switch the type.

## DELAY

No.	Type *2	DELAY knob	DELAY button + DELAY knob
01	DELAY	Wet Level	Feedback Level
02	CROSS	Wet Level	Feedback Level
03	TAPE	Wet Level	Feedback Level
04	MOD DLY	Wet Level	Feedback Level

\*2 Hold down the EXIT button and press the DELAY button.  
Press the KEY/LAYER ▲, ▼ buttons to switch the type.

## REVERB

No.	Type *3	REVERB knob	REVERB button + REVERB knob
01	HALL1	Wet Level	Reverb Time
02	HALL2	Wet Level	Reverb Time
03	ROOM1	Wet Level	Reverb Time
04	ROOM2	Wet Level	Reverb Time
05	SPRING	Wet Level	Reverb Time

\*3 Hold down the EXIT button and press the REVERB button.  
Press the KEY/LAYER ▲, ▼ buttons to switch the type.

# Demo songs

SCENE	Button Part	Song (Variation) name	Composer	Part	Type
1	ORGAN	Radio Radio Organ 1	Mao Yamamoto	ORGAN	VOX
2	ORGAN	R&B Organ 2	Anthony Williams	ORGAN	CX-3
3	ORGAN	Distortion Organ	Dan Gabriel Stesco	ORGAN	CX-3
4	ORGAN	Gospel Organ	Jonathan Fashole-Luke	ORGAN	CX-3
1	E.PIANO	E.Piano MK II Tremolo	Jonathan Fashole-Luke	E.PIANO	TINE
2	E.PIANO	E.Piano MK I Tremolo	Mao Yamamoto	E.PIANO	TINE
3	E.PIANO	E.Piano MK I Amp	Anthony Williams	E.PIANO	TINE
4	E.PIANO	Dark FM E.Piano	Dan Gabriel Stesco	E.PIANO	FM
1	PIANO	Grand Piano 1	Anthony Williams	PIANO	GRAND
2	PIANO	Rock Octave Piano	Dan Gabriel Stesco	PIANO	GRAND
3	PIANO	Grand Piano 2	Jonathan Fashole-Luke	PIANO	GRAND
4	PIANO	Upright Piano Mono 2	Mao Yamamoto	PIANO	UPRIGHT
1	KEY/LAYER	Clav Wah	Anthony Williams	KEY/LAYER	KEY
2	KEY/LAYER	Rock Lead	Dan Gabriel Stesco	KEY/LAYER	LEAD
3	KEY/LAYER	Soft Distortion Lead	Mao Yamamoto	KEY/LAYER	LEAD
4	KEY/LAYER	The Dawn Pad	Jonathan Fashole-Luke	KEY/LAYER	SYNTH

Credit: All Rights Reserved.

For more information about Anthony Williams, visit <http://www.korg.com/us/features/artists/2016/0210/>

For more information about Dan Gabriel Stesco, visit <http://www.danstesco.ro/>

For more information about Jonathan Fashole-Luke, visit <http://goldengroove.co.uk/act/jonathan-fashole-luke/>

For more information about Mao Yamamoto, visit <http://www.mao-official.com/>

The copyright of all works belongs to KORG Inc. unless stated.



**Vox Amplification Ltd.**

1 Harrison Close, Knowlhill, Milton Keynes, MK5 8PA. UK

[www.voxamps.com](http://www.voxamps.com)