
Adio System Firmware Update

Update Procedures for Windows users

- ▲ This updater is compatible with Windows 7 SP1 or later.
- ▲ When other USB-MIDI devices are connected to your PC, the updater may not start correctly. Please remove the other USB-MIDI devices from your PC.


1. Unzip the “Adio_V####_win.zip”. (#### is version number)

- ▲ Extract all the files in the zip file before proceeding to step 3.
The updater may not be able to find necessary files if they were not unzipped.

2. Turn the Adio on by holding down the power button and simultaneously holding down these three switches: BANK/MANUAL, USER PROGRAM 2 and 4. Confirm that the BANK LED and four of the USER PROGRAMS LEDs (1~4) light up then connect the Adio to your PC via USB.

3. Run the “VoxSystemUpdater.exe” by double-clicking the icon. The following window will appear.


(Current Version : Currently installed version, Latest Version : The version you are installing)

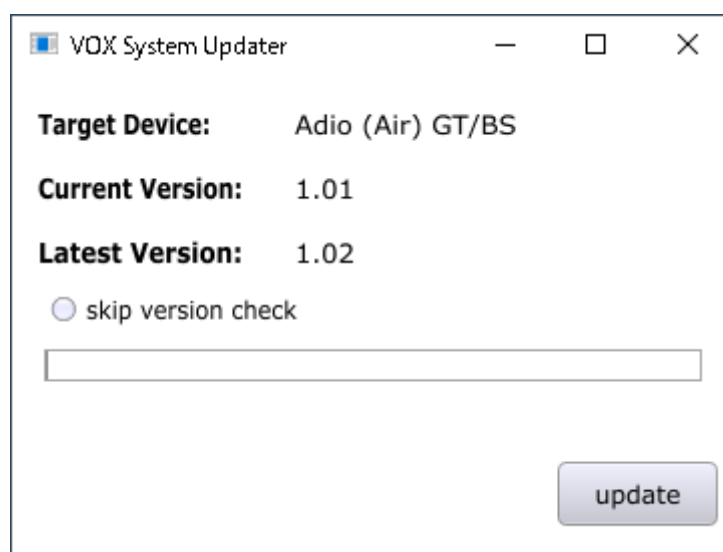


4. Push the [update] button in the window to start the process.


- ▲ If “The same or newer version is already installed.” message is shown, the system firmware is already up to date. In this case simply quit the VOX System Updater. (Push the [exit] button in the window.)
If you would like to install an older version and proceed, click the “skip version check” box and push the [update] button.
- ▲ Confirm that the Adio is connected to your device properly if some Error message is shown. Refer to the following list (“VOX System Updater Message List”).

5. During the updating process, the following window will appear.

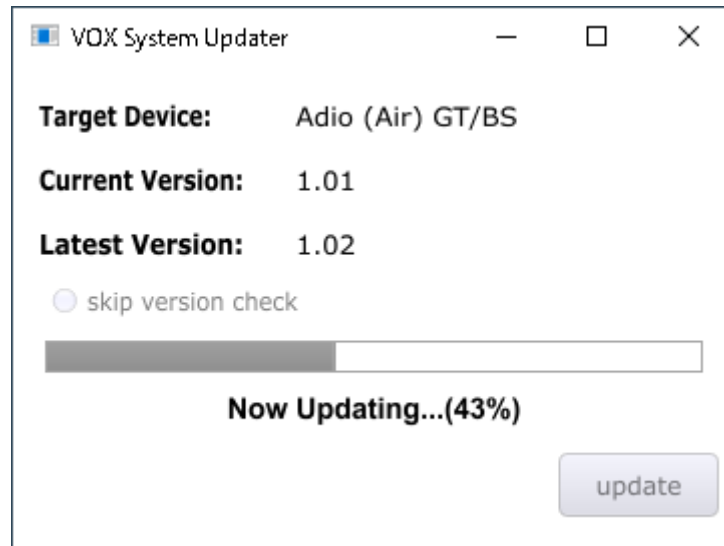

 Do not disconnect the Adio from the computer or turn off the power of the Adio during the update process.

6. The following message will be shown when the update has successfully completed.

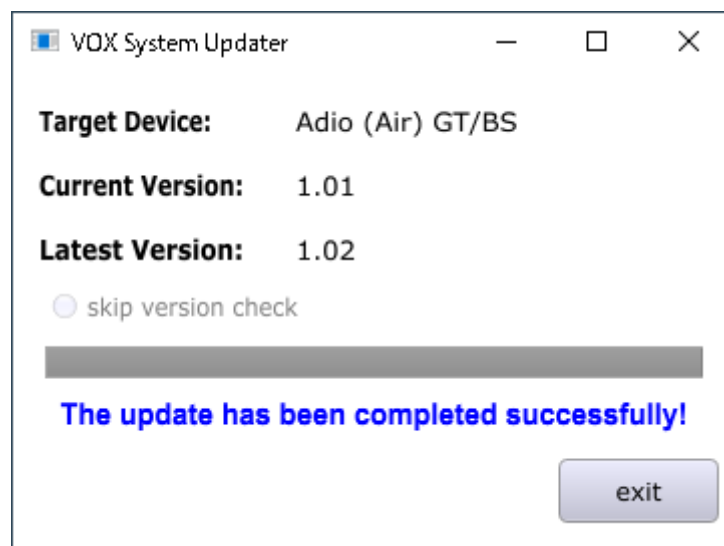

7. Push the [exit] button in the window to quit the VOX System Updater.

8. Reboot the Adio.

 You need to reboot the Adio to use the updated system.

9. You can confirm the Adio firmware version by Tone Room. Connect your Adio and Tone Room then Choose "About" from the MENU of Tone Room. The version number will be displayed as [Adio (Air) (GT or BS) : version *.*].

VOX System Updater Message List

Communication Error (E**)

[**:01~07]

Solution:

- Confirm if there is a **.vsb file corresponding to your device in the same folder where VoxSystemUpdater.exe is.
- Only connect the device which you would like to update to your PC/Mac.
- Turn your device off and on again.
(Switch the device into version up mode if the device has this function.)
Connect the device to your PC/Mac with a USB cable and restart the updater and execute the update process.

Failed to update!

Solution:

- Turn your device off and on again.
(Switch the device into version up mode if the device has this function.)
Connect the device to your PC/Mac with a USB cable and restart the updater and execute the update process.



Vox Amplification Ltd.

1 Harrison Close, Knowlhill, Milton Keynes, MK5 8PA. UK

www.voxamps.com